



visit our
website!

Original
DESIGN

Service
CUSTOMI
ZATION

Stock
EU&UK

OWNER'S MANUAL

E - B I K E

REVOM

The following information updates your ebike's Owner's Manual. Please read it carefully. Keep your owner's manual and any other documents that came with your ebike. All content in this update and the manual is subject to change or withdrawal without notice. Visit www.revomebike.com to view and download the latest version. REVOM E-Bike makes every effort to ensure the accuracy of its documentation and assumes no responsibility or liability if any errors or inaccuracies appear within.



WARNING: Incorrect assembly, maintenance, or use of your ebike can cause component or performance failure, loss of control, serious injury, or death. Even if you're an experienced bike rider, you must read and understand the entire manual and any documentation provided for subcomponents or accessories before riding. If you are not sure you have the experience, skills, and tools to correctly perform all assembly steps in the manual and the assembly video at www.revomebike.com, consult a local, certified, reputable bike mechanic.



WARNING: To reduce the risk of injury, close supervision is necessary when the product is used near children.

Guard against rust, water damage, and corrosion

Like any vehicle used outdoors, your ebike needs care to ensure it isn't damaged by the elements. Follow these steps for a long, healthy life for your ebike:

- Store under shelter and in an upright position; avoid leaving the bike in the rain or exposed to corrosive substances such as water, salt, or de-icing substances.
- To clean your ebike, turn the bike and battery off and wipe the frame with a clean, damp cloth. If needed, apply a mild, non corrosive detergent mixture to the damp cloth and wipe the frame. Dry by wiping with a clean, dry cloth. Never use high-pressure water on your bike. Wipe down your bike frequently and wipe or spray all unpainted mechanical parts with anti-rust treatment.
- If painted metal parts become scratched or chipped, use touch up paint or nail polish to prevent rust.
- Never immerse or submerge the bike or any components in water or liquid, which can damage the electrical system.



WARNING: Damage to your ebike's electrical system caused in any manner, including water intrusion, can lead to battery failure, electrical system malfunction, or electrical fire and consequent property damage, injury, or death. Follow all recommendations to minimize chance of water damage. If you have any questions, contact REVOM E-bike Product Support.

Additional precautions regarding electrical components



WARNING: Using a damaged battery or charger can create additional bike damage or a fire hazard. Stop using your battery and charger and contact Revom Ebike immediately if any of the following occur: (1) Your charger's flexible power cord or output cable or any of the electrical cables on your bike is frayed, has broken insulation, or any other signs of damage, (2) Your battery or charger is physically damaged, non-functional, or performing abnormally, (3) Your battery or charger experienced a significant impact from a fall or crash, with or without obvious signs of damage, or (4) Your charger becomes too hot to touch (it's designed to get warm with normal use), makes a funny smell, or shows other signs of overheating. Store any damaged battery or charger in a safe location and, as soon as possible, recycle or otherwise dispose of it according to local rules. Contact Revom EBike if you have any questions or to purchase a compatible replacement battery or charger.

How the electrical system works

This ebike is equipped for a rider to use power assistance from the motor to propel the bike forward: a pedal assist system (PAS) . And the shift throttle can be helpful to start with Max speed at 6KM/H.

HOW PEDAL ASSIST WORKS

The rider can engage the pedal assist system (PAS) while pedaling, and it will call up assistance from the motor to help propel the bike forward. Pedal assist uses a cadence sensor built into the drivetrain of the bike. The sensor detects when the rider revolves the pedals and signals the electric motor to provide the level of pedal assistance (PAS 0-5 on most models) that has been selected.

HOW THE THROTTLE WORKS

The throttle is located on the right side of the handlebar. The rider can use it with a shift of the throttle to propel the bike forward without pedaling when speed level is at 1-5.

To engage the throttle while riding, slowly and carefully rotate it toward yourself.

if not needed, please turn off the bike to prevent accidentally engaging the throttle.

Please note that the max speed of throttle is only 6KM/H as per UK safty regulations.

eCargo C1



REVOM E-BIKE

OWNER'S MANUAL

Welcome!

Thank you for purchasing the eCargo C1 from REVOM E-BIKE!

We take pride in bringing you a quality product that will offer years of enjoyment. Please read and understand this manual fully before assembling and riding your bike.

If you're not sure you have the skills, experience, and special tools required for assembly and maintenance, get help from a local, certified, and reputable bike shop or mechanic.

We are here to help!

If you have questions after reading this manual and watching the assembly video, please consult the Revom E-Bike Help Center, contact us by email or visit Revom website.

Thanks for riding Revom Bikes!

Revom E-Bike Help Center: <https://www.revomebike.com/contact-revomebike>

Email: info@revomebike.com

Table of Contents

Using this manual	02
Assembly Instruction for the eCargo C1	03
Assemble the Bike: Handlebars	05
Assemble the Bike: Front Wheel	06
Assemble the Bike: Mudguards and Front light	07
Assemble the Bike: Front basket and Front light	07
Assemble the Bike: Rear basket	08
Assemble the Bike: Seat Installation	08
Assemble the Bike: Pedals & Tire Pressure.....	09
Assemble the Bike: Rear Caboose	10
Revom Operation: Battery Removal & Installation, Charging, and Storage	11
Removal & Install the Battery	11
Charging the Battery	12
Long Term Battery Care	13
Extending the Life of Your Battery	13
Revom Operation: System and Display	14
Revom Operation: Usage	20
Revom: Troubleshooting	21
Revom: Care & Maintenance	22
Transporting an Electric Bicycle	22
Care & Cleaning	23
Revom: Warranty	24
WARRANTY REGISTRATION INFORMATION CARD	24

Using this Manual

This manual contains critical details about how to safely operate and maintain your eCargo C1. Read it carefully and familiarize yourself with your ebike before riding it. Pay special attention to the safety messages shown here.

NOTICE: A “notice” is important information that can help you avoid bike/property damage or extend the life of parts and the bike.



WARNING: A “warning” statement indicates a hazardous situation that, if not avoided, could result in death, serious injury, or property damage.



CAUTION: A “caution” statement indicates a hazardous situation that, if not avoided, could result in minor or moderate injury or property damage.



DANGER: A “danger” statement indicates a hazardous situation that, if not avoided, has a very high risk of death, serious injury, or property damage.

Riding any bike or other vehicle always involves some risk of serious injury or death. Your safety depends on many factors including your bike knowledge, your bike’s maintenance, foreseeable riding conditions, etc. There are also factors we cannot control or anticipate in every situation or condition while riding. This manual makes no representations about the safe use of bikes under all conditions. If you have any questions you should contact Revom E-Bike immediately.

Assembly and first adjustment of your bike from Revom E-Bike requires special tools and skills. We recommend that you have this done by a certified, reputable bike shop or mechanic.

Assembly Instruction for the eCargo C1



WARNING: Incorrect assembly, maintenance, or use of your eCargo C1 can cause component or performance failure, loss of control, serious injury, or death. Even if you're an experienced bike rider, **you must read and understand the entire manual and any documentation provided for subcomponents or accessories before riding.** If you are not sure you have the experience, skills, and tools to correctly perform all assembly steps in the manual, consult a local, certified, reputable bike shop or mechanic.

1. Unpack the bike. Open the bike box and, with the help of another person capable of safely lifting a heavy object, remove the eCargo C1 from the Carton, placing it upright on the back wheels and front fork protector plate. Carefully remove the packaging material protecting the bike frame and components, and keep the packaging materials in case you want to ship the trike. Otherwise, recycle these materials, especially cardboard and foam, wherever possible. Carefully place the handlebar on the ground in front of the front fork. Take out the small bag from the Trike carton and carefully set out the contents. Ensure all of the following pieces are included with the eCargo C1:

Box Contents:

- 1 x Bike with Rear Wheel ,hanelbar and stems attached
- 1 x Front Wheel
- 1 x Front fender and mounting hardware
- 1 x Headlight
- 1 x Front wheel quick release
- 2 x Pedals (Left & Right)
- 1 x Lithium Battery
- 2 x Battery cover keys (on select models)
- 1 x Battery Charger
- 1 x Saddle
- 1 x Assembly Tool Kit Bag
- 2 x footsteps

If anything is missing, please contact Revom E-Bike.

We also recommend the following (not included) for assembly and maintenance:

- A strong friend
- Flat-side cutters
- 15 mm pedal wrench
- Bicycle grease
- Clean shop towel or paper towel for cleaning excess grease
- Bike pump with Schrader valve and pressure gauge
- Torque wrench (3 Nm-60 Nm) with Allen bits

Put the bike onto the kickstand!



Get help from a bike fitting professional for safety and optimal fit and bike ergonomics. Consult a certified, reputable, and local bike fitting specialist for assistance properly fitting the bike to a rider.

2. Assemble the Bike: Handlebars

A. Unfasten the four handlebar faceplate bolts from the bike.

B. Place the handlebar on the stem correctly. Trace the front brake cable directly up from the front brake caliper to the left handlebar and ensure the cables and wires are not twisted.

C. Center the handlebar and tighten the four stem faceplate bolts evenly and part way.

D. Secure to the recommended torque value. Once adjusted properly, use a torque wrench with a 5 mm Allen bit to evenly tighten the four stem faceplate bolts (shown at right) to the recommended torque value, 10 Nm.




3. Assemble the Bike: Mudguards and front light

If you do not need to fix the front basket, please fix the front light onto the fork like below show.

Remove the bolt from the front of the fork and place the mudguard in front of the fitting. Then reinsert the bolt and secure the mudguard in place using the 5mm Allen key provided.

Remove the screws at the bottom of the fork and screw the fender rods into the fork.

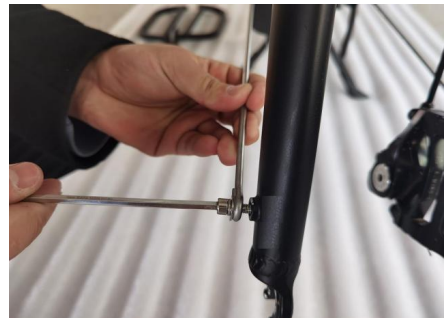

4. Assemble the Bike: Front basket and Front light

If you need to fix a front basket, you may need to fix the front light in front of basket. Remove these four bolts from the head tube and place the front basket onto it. Then reinsert the bolts using the 4mm Allen key provided.

Fit the front light onto the front basket, and tighten the bolt using the 5mm Allen key provided.

The long front light wire is always folded inside the frame. Unwrap the front wires, find the light wire. Let the long front wire go under the basket and connect it to the front wire. Then fix the light wire to bottom of basket to protect it. Do not forget to fold the wire inside frame when you do not need.




5. Assemble the Bike: Front Wheel

Find the front wheel quick release pin in the tool bag, place the front wheel onto the fork.

Make sure the brake disc is properly inserted into the brake calliper.

Fit the quick release pin through the middle of the wheel, tighten the nut and hold the lever in an upright position as shown in the picture below. Once tight push the lever in to secure the wheel.

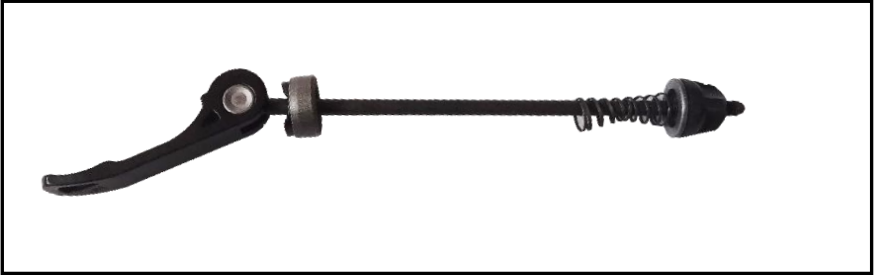

6. Assemble the Bike: Footsteps with wooden panels

Start at the mounting point that is closer to the front of the bike. Put a 6*25mm screw through the footsteps, through the frame. Pass a bolt from the tire side, through the mounting point in the frame. Press the footsteps against the bolt and tighten the bolt part way by hand. Repeat the same process for the three other screws.

Start mounting the back side of the running board by aligning it to the frame by the hole. Then put the long screw 6*60mm from the tire side through the hole and through the frame, and tighten it. Now tighten the first 4 screws using an Allen key and a wrench. After than, fix the wooden panels onto the footsteps by fixing 4 screws on the top.




7. Assemble the Bike: Seat Installation

- Screw the seat onto the seat post.
- Slide the saddle post into the seat tube.
- Align the seat with the frame to make sure it is straight.
- The height of the seat should not be higher than the safety line marks on the seat post.
- Tighten the seat clamping lever.



DANGER:

A loose seat clamp or seat adjustment bolt can cause loss of control, bike/property damage, serious injury, or death. Regularly check to make sure that the seat adjustment bolt is properly tightened and the clamp is secure on the seat rails.

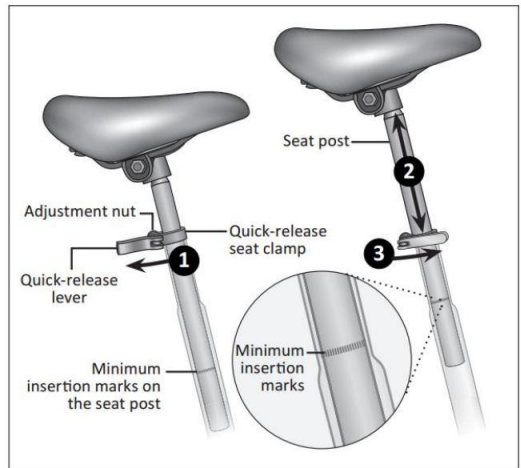


8. Assemble the Bike: Pedals

Each of the 2 pedals is marked on the bottom to identify right (R) and left (L).


To connect the pedals to the e-bike, place the left pedal into the left pedal arm and the right pedal into the right pedal arm (left and right directions are determined by sitting on the e-bike). Tighten each pedal using a pedal wrench to avoid damage caused by wider wrenches.

Make sure you check the pedals are tight and secure before riding.

Right pedal installation

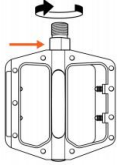


Right pedal with smooth pedal axle.

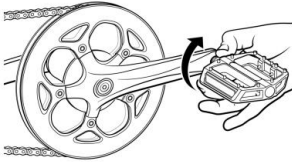


Thread the right pedal onto the right crank gently by hand, turning clockwise.

 
Left pedal installation




Left pedal with notches on the pedal axle.

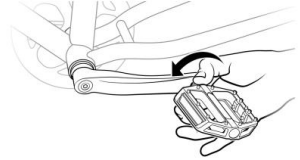

Thread the left pedal onto the left crank gently by hand, turning counterclockwise.

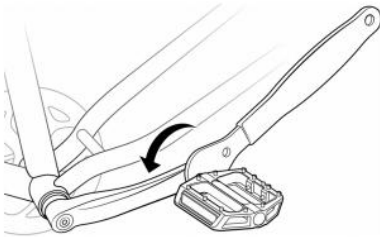

Pedal wrench on left pedal

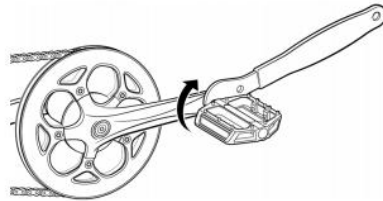

Pedal wrench on right pedal

9. Assemble the Bike: Tire Pressure

- Using a hand pump, fill the tires with air to the rating on the sidewall. We recommend a hand pump to avoid over inflating the tires, which can easily happen when using a high pressure air line at a gas station or automotive tire store.
- The tires are rated for a maximum of pressure of “450 kPa” or “65 PSI”.



CAUTION: The tires have NOT been filled with air to the correct capacity for shipping purposes.

10. Assemble the Bike: Rear Caboose for child

The rear caboose is optional as accessories for this model.

If you need it, you need to assemble the rear caboose first.

Then remove the wooden top panel from the bike, and fit with the rear caboose like the below show, using 4 long bolts and tighten them.

And then you can tie the deckpads onto the rear caboose as seats.



Revom® Operation: Battery Removal & Installation, Precautions, Charging, and Storage



WARNING: Fully charge the battery before the first use! Failure to do this can result in decreased battery performance for the life of the bike and void your battery warranty! Do not attempt to open or repair your battery or charger. If you need another battery or charger contact your dealer or Revom Bikes! Do not touch the battery sockets or blades with your hands, any metal object or other material that conducts electricity! Never put the battery or charger in reach of children! Do not use any charger except the one that came with your Revom Bikes!

- The battery should be fully recharged after each use. That way, you'll get the maximum range on your next ride and reduce the chance that you'll over-discharge the battery, which can reduce its lifespan. There is no memory effect on this type of battery, so charging after short rides will not cause damage.
- Charging the battery after a ride generally takes 3 to 7 hours. In rare cases, charging may take longer to allow the battery management system to balance the battery, particularly when the bike is new, after long periods of storage, or if the battery has been completely depleted.


Battery Removal & Installation

You can use the key to take the battery off the bike.



Charging the Battery

The supplied battery is a lithium-ion chemistry. Check to ensure that the charger voltage is correct for your battery. The 48v charger should read "Output 54.6V== 3A". The 36v charger should read "Output 42V==3A". Only use a wall receptacle with a grounded circuit to plug your charger into.

 **DANGER:** Never charge the battery outside in wet weather, as there is a chance of electrical shock.

- Turn the key to "OFF" and remove the key from the battery.
- Locate the charging port on the battery and remove the rubber dust cover.
- Insert the round plug of the charger into the battery charging port.
- Insert the battery charger plug into a 120Volt wall socket receptacle with a grounded circuit. Do not use an extension cord. The light on the charger should illuminate to steady red.
- When the light on the charger changes to a steady green, the battery is charged. Unplug the charger from the wall receptacle and then from the bike battery. Always disconnect the plugs in this order. The charger will become warm during charging so keep the charger away from any flammable materials.

The charger may reach temperatures up to 185°F/85°C during normal charging. Never enclose the charger or put anything on top of it when charging. The charger must be well ventilated. If the charger emits a peculiar smell or the temperature is too high, stop charging immediately. Do not drop or damage the charger.

Avoid any contact with water when charging your battery. If a plug or socket gets wet, dry it completely before using. Always use the charger according to the instructions. Improper use or attempting to open/ repair the charger will void your warranty.

You can charge your battery either when it's on or off your bike.



Long Term Battery Care

When storing your battery for a long period of time (more than 60 days):

Charge the battery to about 75%, then recharge every 60 days as needed to maintain this level. Allowing your battery to sit for longer than 60 day periods in a discharged state could lead to permanent capacity loss and void your warranty.

- Ideally batteries should be stored between 50°F/10°C to 80°F/27°C. Avoid long periods of freezing and extreme heat, 104°F/40°C or higher.
- Do not leave the battery in direct sunlight for prolonged periods of time.
- Keep the bike in the shade during summer months.
- Store the battery in a clean dry location with low humidity conditions.
- Do not allow the battery to accumulate condensation such as dew, heavy fog or rain, as this could cause shorting.
- Do not clean or wash the battery with pressurized water; wipe with a damp cloth only and towel dry completely.
- Do not connect the battery to the bike in wet conditions.
- Do not submerge the battery in water.


Extending the Life of Your Battery

To help extend the life of the battery, assist the bike as much as possible. A few tips to prolong the battery life during certain conditions are as follows:

- Always turn your battery key “OFF” after each use, as the electrical system will still draw minute power from your battery.
- When starting from dead stop, use the pedals to bring the bike up to speed.
- When riding uphill or against the wind, pedal to supplement the battery power.
- When the battery meter indicates the voltage is low, switch to the lowest pedal assist mode or 0 to avoid using the battery and shortening the battery life.
- Do not ride your bike in heavy rain storms, thunder showers, or extreme conditions.
- Store your battery in a location with a temperature above 50°F/10°C for best results.

Revom® Operation: System and Display

Handlebar features

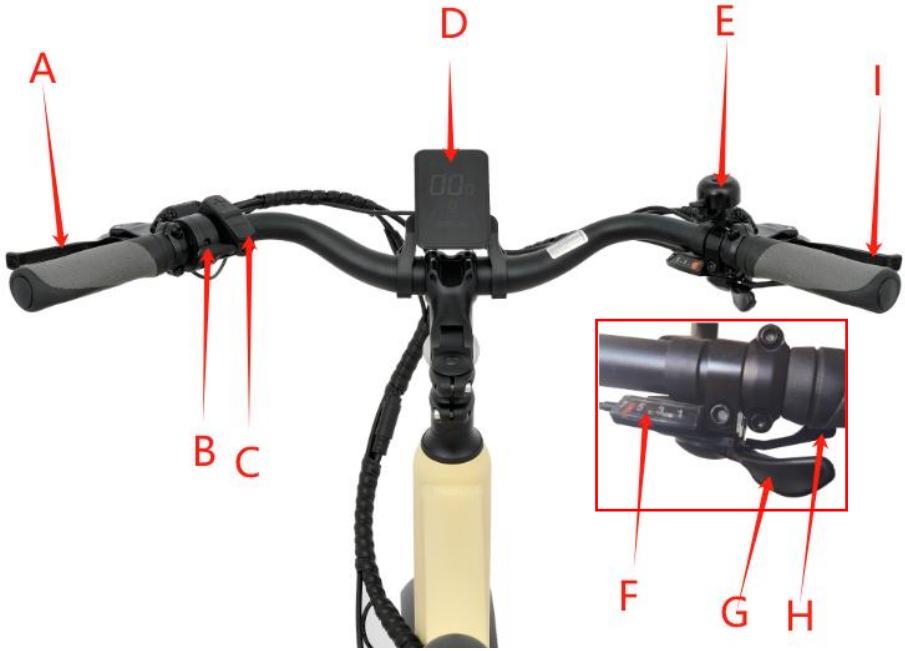

A	Left brake lever (for front brake)
B	Throttle
C	LCD display remote
D	LCD display
E	Bell
F	Shifter
G	Up-shift button
H	Down-shift lever
I	Right brake lever (for rear brake)






LCD display and electric controls




Physical picture of the LCD display remote





Physical picture of the display

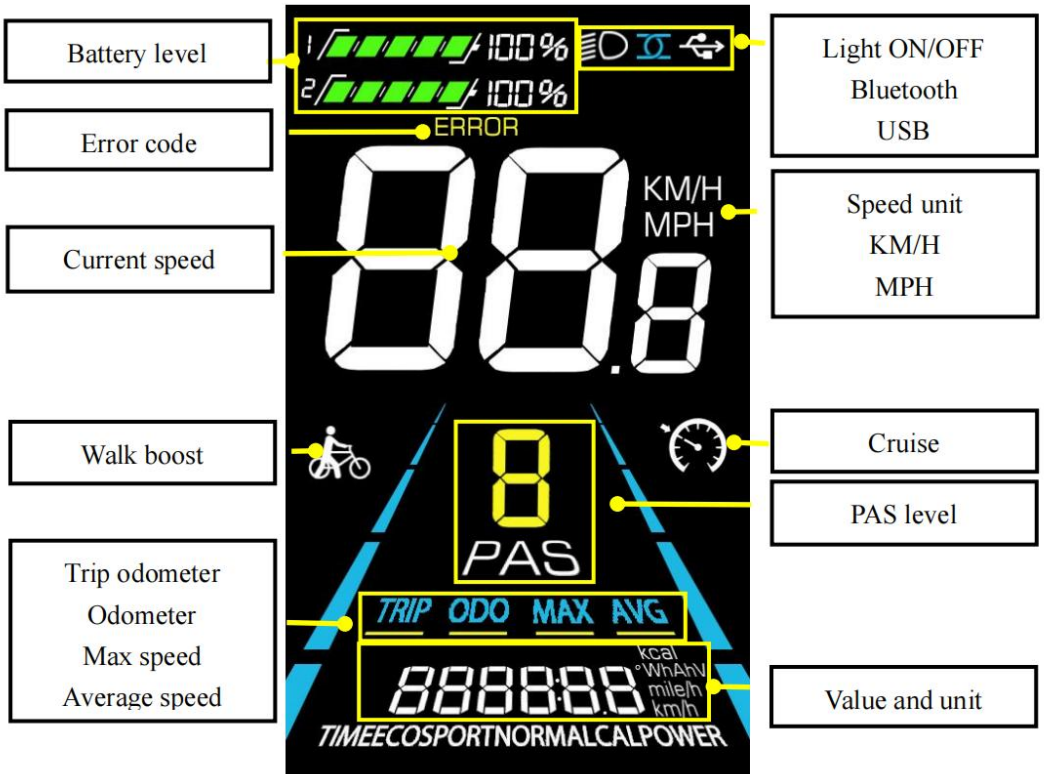This display is equipped with five buttons on the corresponding operating unit: power on/off , plus , minus , light  and toggle .




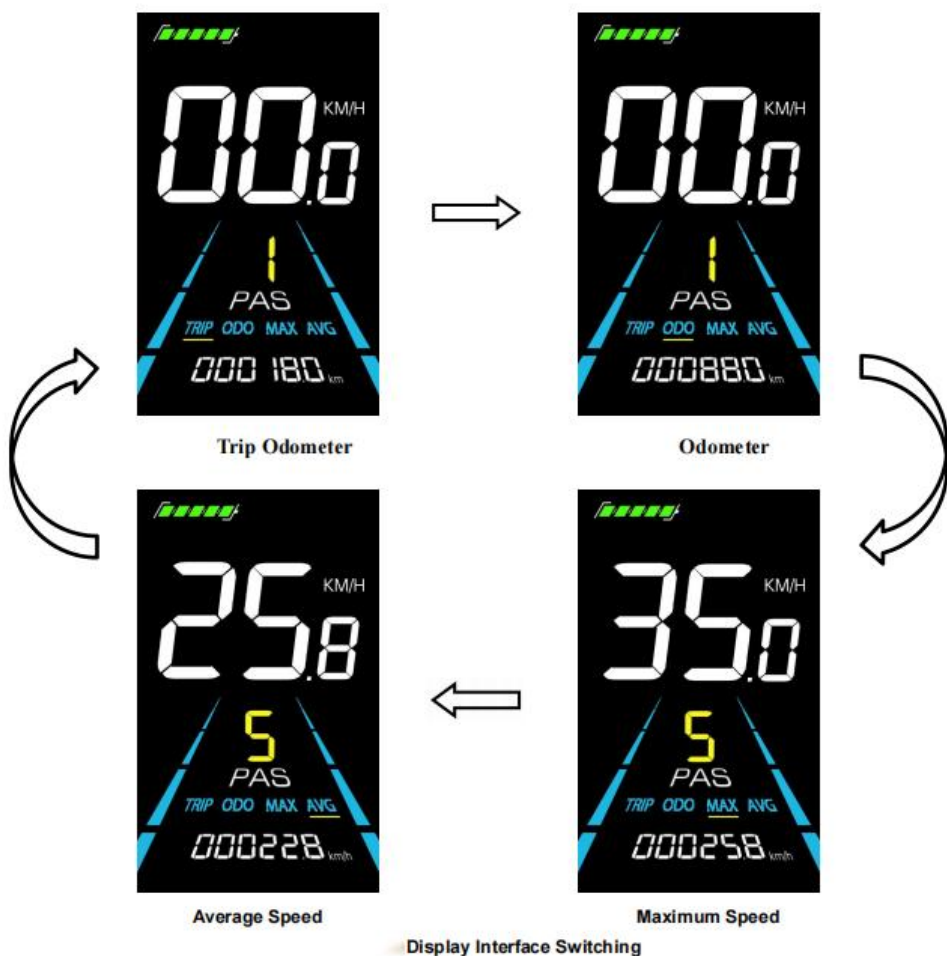
● Power on/off

Long press  to power on/off the display. When the display is off, it will not use the battery power and the leakage current is less than 1uA.




 **The display will automatically shut off if it is not used for more than 10 minutes.**

● Display interface switching

When the display is powered on, it will show the Current Speed (km/h) and Trip Odometer (km) by default. Short press  to switch between Trip Odometer(km), Odometer (km), Maximum Speed (km/h), and Average Speed (km/h).




● Walk boost mode



Long Press and hold , the electric bicycle enters the walk boost mode. The electric bicycle will walk at a fixed speed of 6 km/h and the display shows . Release  to stop the power output immediately and restore to the state before walk boost.



Helping to implement the display screen

 The walk boost mode can only be used when pushing the electric bicycle, please do not use it while riding.



● Turning on/off lights

Press the  to make the controller turn on the lights and the display backlight becomes dim. Press  again to make the controller turn off the lights and the backlight restore brightness.



Backlight display interface

● **PAS level selection**

Press  /  to switch PAS level of electric bicycle, thus changing the motor output power.



● PAS level display interface

● **Battery level display**

The Battery level is shown as 5 bars. When the battery is full charged, all of the 5 bars lighten up. When the battery is fully depleted, the bar will begin to flash, warning the user to charge the battery as soon as possible.



Full power



Four bars power



Three bars power



Two bars power



One bar power



Empty power flashing


Battery Level Display Interface

● **Error code display**

If there is a fault occurs in the electronic system of the electric bicycle, the display will automatically show an error code, see **Schedule 1** for a detailed definition of the error code.



When the error code appears on the display, please troubleshoot the problem in time, the electric bicycle will not be able to drive normally after the problem occurs.

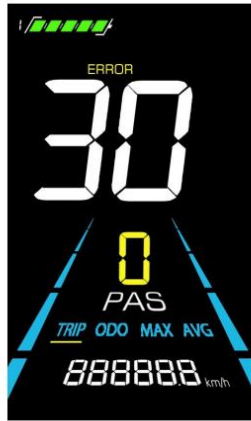

Error Code Display

Schedule 1: Error Code Definition

Error code	Definition	Error code	Definition
E021	Current failure	E024	Hall failure
E022	Throttle failure	E025	Brake failure
E023	Motor phase failure	E030	Communication failure

Revom[®] Operation: Pre-Ride Checklist & Usage

“10 Point” Check List - Before your First Ride and Every Ride After

1. Battery is connected, locked, and charged.
2. Electrical devices, including front and rear safety lighting, are working correctly.
3. All nuts and bolts are tight.
4. The front and rear wheels are secured to the bike frame and cam locks are tight.
5. The tires are filled to the correct pressure, indicated on the tire side wall.
6. The brakes are adjusted and operating correctly.
7. The seat is locked and the seat stem is adjusted to the correct height.
8. Handlebars are tightened firmly.
9. Chain and crank arms run smoothly and are lubricated.
10. The rider is wearing appropriate high visibility reflective clothing, helmet, and eye protection.

Usage

- Wear shoes that grip firmly to the pedals, no bare feet.
- Wear high visibility clothing no loose clothing and dress to be seen.
- Wear an approved bicycle helmet and eye protection.
- Keep your speed levels appropriate to road conditions and speed limits.
- Ride slow on wet or slippery surfaces and brake sooner than anticipated.
- Be alert and highly visible at night or in poor weather conditions.
- Familiarize yourself with usage of the bike and know how to maintain it.
- Be familiar with traffic signs, rules and laws, and be aware of other traffic.
- When possible, ride in bike lanes and in the correct direction of traffic flow.
- Do not ride on the sidewalk and dismount when using pedestrian crossings.
- Keep both hands on the handlebars when riding.
- Keep in mind that other traffic may underestimate the speed of an electric bicycle.
- Ride defensively, keep alert, and have fun!

This is a powerful electric assisted bicycle and special care must be taken when riding. You will be riding faster than you think!

Because the bike can quickly reach high speeds, you need to exercise caution when operating this E-Bike. Even though you may be an experienced bicycle rider, your first ride should be in an area without traffic or other hazards.

We suggest that you ride the bike as a bicycle with no power assist turned on (set “ASSIST” to “0”), to familiarize yourself with the bike’s extra weight. Test the bike’s braking ability to determine your stopping distances. Once you become confident in your riding ability, set the assist level to the lowest setting, Level 1, and begin riding the bike.

Revom[®] Operation: Troubleshooting

SYMPTOM

DIAGNOSIS

Display do not work:

Display has bad connection.
Controller is defective.
Long press the switch to power on the display.

Display is "ON", motor will not start:

"ASSIST" is set to 0.
Battery level is too low.
Brake lever is slightly depressed.
Controller is defective.

Throttle failure, Pedal Assist works:

Throttle is defective.
Throttle has bad connection.
Controller is defective.

Throttle works, Pedal Assist failure:

Pedal Assist connection to controller.
Pedal Assist sensor is defective.

When riding, you stop. The throttle will not restart the motor:

Brake lever has not released.
Brake lever kill switch is defective.
Controller is defective.

Motor has low power:

Check tire pressure
Check brake calliper is sticking closed.
Check battery is charged.

Head light will not turn on, but Display backlight works:

Wire is loose or disconnected at light.
LED's in head light are defective.

Charger is plugged in, but green or red LED indicator light does not illuminate:

Check the wall receptacle; move to another and retest.

Charger is plugged in, but will only show green light "ON":

Battery is fully charged.
Charger fuse may be burnt.

If the above symptoms do not relate to your malfunction, please call REVOM BIKES or your local E-Bike shop for assistance.

Revom[®] Operation: Care & Maintenance

Transporting an Electric Bicycle

Caution: Make absolutely certain that the bike rack on your car is suitable for the increased weight and the frame style of your Volton E-Bike. A rack that is not suitable for the increased weight can be damaged or even break during the transport. Remove the battery and protect the electronics from inclement weather, your motor and system connections should be protected from the elements. Also remember that most commercial flights will not accept a lithium battery even when installed in the bike.

Maintenance

Squeeze the brakes and rock the bike to check for any looseness with each forward or backward movement.

Look at the headset, brake disc and callipers, wheels, wheel nuts, forks, pedals and crank, and saddle. Check cables for rust kinks and fraying. Squeeze the spokes in adjoining pairs between your thumb and index finger to confirm they have the same tension.

Wheels

Check the wheel nuts are secure and tight by removing the plastic caps and inspecting.

Rims

Spin the wheels and check for side to side wobble and up and down oblongata. The wheels when true will not have more that 1.0mm on each side or up and down. Wheels should only be adjusted by certified mechanics.

Spokes

Check for damaged stainless spokes regularly. Replace broken bent or fatigued stainless spokes with manufacture's suggest spokes only

Tires

Check tires for cuts or punctures and ware. Tire pressure should be adjusted as per the sidewall specifications.

Chain

The chain should run smoothly when clean and lubricated. Lubricate the chain regularly at least every 3 months or after a wet ride

Brakes

Check the brake pads for wear. They are held into the calliper magnetically. Pads can be removed by grasping the pad end tab and lifting the pad clear of the piston pin and then maneuvering it out of the rotor slot in the calliper body. If they have worn to the point where the calliper piston pin-positioning hole goes all the way through then they need to be replaced.

Adjust cables as needed to increase braking power. Check the brake cable tension and adjust by either using the adjusting screws on the brake levers or the adjusting screws at the brake callipers, or retention the cable with the cable adjuster bolt/ nut clamp.

After riding remove any mud or other contamination from the rotor slot in the calliper. Clean the calliper body and rotor slot with brake cleaner and lubricate the brake lever pivot with thick oil or grease. Check to make sure that all bolts are tightened to torque specifications.

Care and Cleaning

Never use a high pressure washer or a garden hose to clean your bike. The force of the water jet could damage the electrical components. We recommend a soft cloth or brush to clean the bike. Use a moist cloth to clean the battery and docking station. Always use very little water and keep water away from the electrical contacts.

Check the plug-in connections for moisture after cleaning and let these dry if necessary before using or charging the bike.

Keys for the Battery

Keep the keys to your E-Bike in a safe place! Each set of keys are unique to your bike only and unfortunately we do not keep a copy of your key on file or have a way of reproducing your exact keys. If you lose your set of keys you may require a locksmith to replace the complete locking mechanisms.

Revom® Operation: Warranty

Register your warranty

To register your warranty, go to <https://www.revomebike.com/warranty-registerform> or scan the QR code below.



To register your warranty, you will need to know your frame serial number and battery serial number. The frame serial number is located on the front of the frame behind your front light. The battery serial number is located on the side of the battery. This is found by removing the battery from the frame. The serial number will normally be 15 digits.

All REVOM bikes are covered under a 2-year limited warranty. Please fill out the warranty form on our website to obtain a 2-year warranty for your Revom E-bike.